 


 **BLACK & DECKER**[®]

SAVE THIS USE AND CARE BOOK

SpotLiter Ultra[™] Rechargeable Light

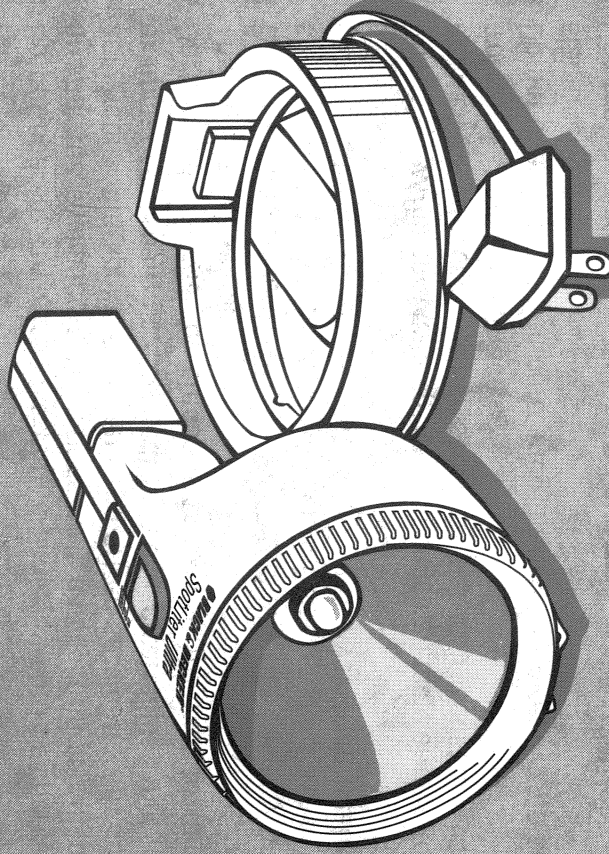

The International Standards Organization recycling symbol indicates this product contains batteries which must be recycled at the end of the life of the Light.
FOR ADDITIONAL INFORMATION CALL 1-800-231-9786

MODEL 9370G

 **BLACK & DECKER**[®]

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE UNIT.

WARNING: To reduce the risk of fire, electrical shock or injury to persons:

- Close supervision is necessary when any appliance is used by or near children. Do not allow to be used as a toy.
- To protect against risk of electrical shock, do not put unit or charging base in water or other liquid.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Do not operate any appliance with a damaged cord or charger or after the appliance malfunctions or is damaged in any manner. Return the appliance to any authorized service facility for examination, repair, or electrical or mechanical adjustment.
- Do not use the charger outdoors or expose the unit to rain. The unit is not watertight.
- Do not abuse the cord. Never carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect. Keep cord away from heated surfaces.
- Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces. The unit should be placed or mounted away from sinks and hot surfaces.
- Do not use an extension cord. Plug the charger directly into an electrical outlet.
- Use the charger only in a standard electrical outlet (120V/60Hz).
- Do not attempt to use the charger with any other product; do not attempt to charge this product with any other charger.
- Do not handle plug or appliance with wet hands.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

Spotlitter Ultra™ Rechargeable Light Replacement Bulb Order Form

Mail Order Form to:

Black & Decker® Spotlitter Ultra™ Bulb Offer
 P.O. Box 600, Hampstead, MD 21074-0600

Name _____

Street Address _____

City _____ State _____ Zip _____ Phone # _____

Method of Payment:

Check or M.O. Payable to Black & Decker. Do Not Send Cash, C.O.D.
 Orders Not Accepted.

- VISA MASTERCARD DISCOVER

CARD NO. _____ / _____ Expires _____ cardholder's signature _____

Offer good in the United States only. Allow 4-5 weeks for delivery. Prices subject to change.

Products Listed Below Are For Use With Black & Decker® Spotlitter Ultra™ Rechargeable Light, Model 9370G.

OFFICE USE ONLY	PRODUCT DESCRIPTION	PART NUMBER	QTY.	PRICE EACH	TOTAL AMOUNT
1	Xenon Bulb	168002-00		\$2.00	
1	Kit A - Package of 3 Xenon Bulbs	3-168002-00		\$4.80 (\$1.60 Each Save 20%)	

SUBTOTAL \$ _____

LOCAL SALES TAX \$ _____
(Except AK, DC, DE, IL, MS, MT, ND, NH, OR, PR, RI, SD, VT, WY)

SHIPPING & HANDLING \$ _____

TOTAL AMOUNT \$ _____

pages of your phone book under Electric-Appliances-Small-Repairing.

If mailing or shipping your SpotLiter Ultra™ Rechargeable Light, pack it carefully in a sturdy carton with enough material to prevent damage. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

Consumer-replaceable parts and accessories are available at Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Centers or can be mail ordered using the order form on page 11 of this book.

TWO-YEAR WARRANTY

Black & Decker (U.S.) Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid, provided it is delivered prepaid to any Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Answers to any questions regarding warranty service/locations may be obtained by writing:



Consumer Assistance and Information
Black & Decker (U.S.) Inc.
6 Armstrong Road
Shelton, CT 06484-4797

 
Listed by Underwriters Laboratories Inc.
Copyright © 1989, 1990, 1992 Black & Decker
Pub. No. 168642-16-RV01
Printed in U.S.A.

- Unplug the charger from outlet before any routine cleaning or maintenance.
- This product contains nickel cadmium batteries which must be recycled at the end of the life of the Light and disposed of properly. (See Battery Removal and Disposal; Disposal, page 8.) Do not incinerate or compost batteries as they will explode at high temperatures.

- Leaks from battery cells can occur under extreme conditions. If the liquid, which is a 20-35% solution of potassium hydroxide, gets on the skin (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.

SAVE THESE INSTRUCTIONS

1. Lens
2. Lens Head
3. On/Off/Charge/Auto Switch
4. LED Light
5. Folding Handle
6. Charging Ring
7. Cord
8. Cord Storage Area
9. Charger Plug
10. Bulb
11. 2 Plastic Wall Anchors
12. 2 Mounting Screws

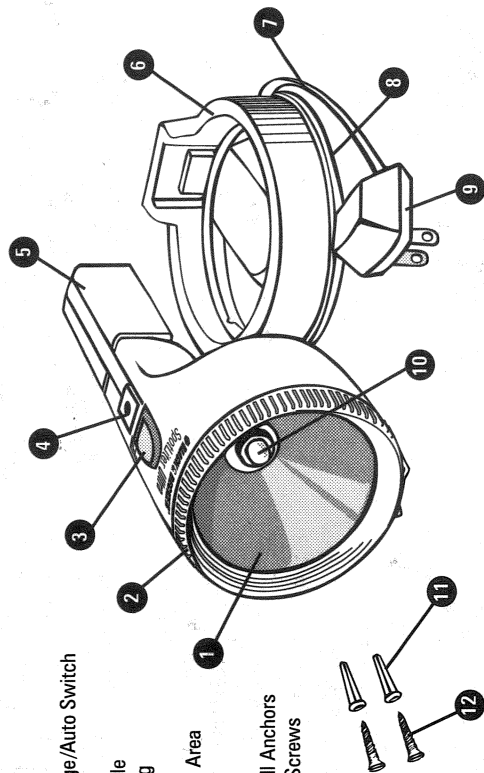

How to Use

MOUNTING THE CHARGING RING

The Charging Ring is designed to be mounted on a wall or placed on a shelf or other flat surface.

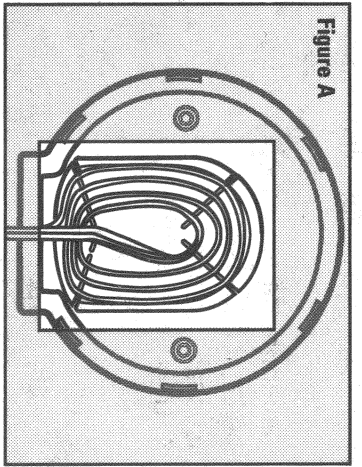


Figure A

Wrap the cord in the cord storage area on the back of the Charging Base and exit out the bottom. (Figure A)

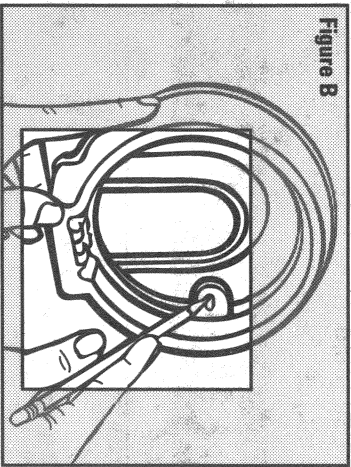


Figure B

Place the Charging Ring against the mounting surface, making sure the metal contacts are at the bottom and the two mounting slots are level. Mark the centers of the two slots. (Figure B)

CAUTION: When drilling, take care to avoid any electrical wiring located behind the wall.

Safety glasses should be worn anytime a drill is being used.

Drill a 3/16" diameter hole through the center of one of the marks. If mounting the Base to a drywall or plaster wall, push a plastic wall anchor fully into the hole.

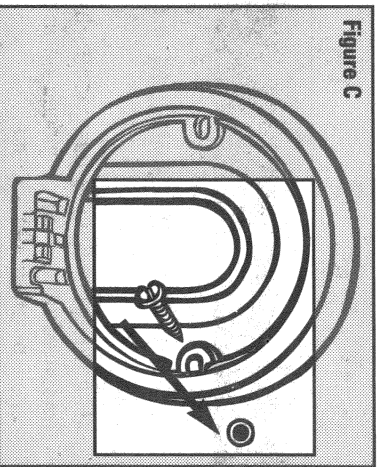


Figure C

Check the second hole location before drilling the second hole.

Place the Charging Ring over the plastic anchors and insert the screws. (Figure C) Tighten the screws to hold the Base flush to the mounting surface.

Cads. Unlike the familiar alkaline batteries that may last only a few hours before being replaced, Ni-Cads can be recharged over and over again. In addition, Ni-Cads need not contribute to our country's growing waste-disposal problem — as alkaline batteries do — because they can be recycled. They should not be disposed of, incinerated, composted or landfilled.

Though Ni-Cads last far longer than alkaline batteries — usually between 5 to 7 years — they eventually will no longer hold a charge. When that happens, many consumers simply throw away the battery or the product itself. That is both wasteful, and harmful to the environment. When you throw away a Ni-Cad battery — or any battery for that matter it contributes to the waste-disposal problem. To help avoid this, Black & Decker has begun a comprehensive, nationwide program of Ni-Cad battery recycling. We're pitching in to keep rechargeable Ni-Cad batteries out of the waste stream.

Here's how you can help. When your Black & Decker cordless tool or appliance no longer holds a charge, take or send the product with a note asking Black & Decker to recycle the product, to your local Black & Decker service center. We will then see to the proper disposal of the batteries and the product. Or, if you wish, follow the battery removal instructions on page 8 of this instruction manual and contact your local municipality for proper battery disposal instructions.

If you have any further questions about Black & Decker's Ni-Cad battery recycling program or need to locate the Black & Decker Service Center nearest you, call our toll-free Consumer Assistance & Information number at 1-800-231-9786.

Need Help?

SERVICE OR REPAIR

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can be found in the yellow

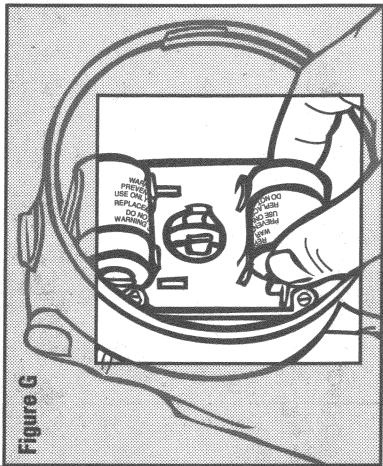


Figure 6

REMOVAL:

Follow the Bulb replacement procedure (page 7) to expose the inside of the SpotLiter Ultra™ Rechargeable Light.

You will see two barrel shaped batteries on opposite sides of the unit. Remove them by grasping at both ends and gently rocking back and forth. (Figure G)

IMPORTANT: DO NOT ATTEMPT TO REMOVE THE PLASTIC OR CARDBOARD COVERS FROM THE BATTERIES. DO NOT ATTEMPT TO REPLACE THE BATTERIES WITH ANY OTHER THAN THOSE SUPPLIED BY THE MANUFACTURER.

DISPOSAL:

The batteries or the entire product can be taken to a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. If you wish to purchase new batteries, the Centers will install them at no charge. Or, if you wish, contact your local municipality for proper disposal instructions. Do not dispose of in an incinerator or landfill.

For more information on nickel cadmium batteries' recycling, call the Black & Decker toll free Consumer Assistance & Information number 1-800-231-9786.

WHY YOU SHOULD RECYCLE YOUR RECHARGEABLE PRODUCTS?

In the past decade we have all become accustomed to the power and convenience of hand-held, rechargeable power tools and appliances, such as cordless phones, and the popular Black & Decker Cordless Screwdriver and Dustbuster® Cordless Vacuum.

Most of these tools and appliances are powered by nickel cadmium batteries, popularly known as Ni-

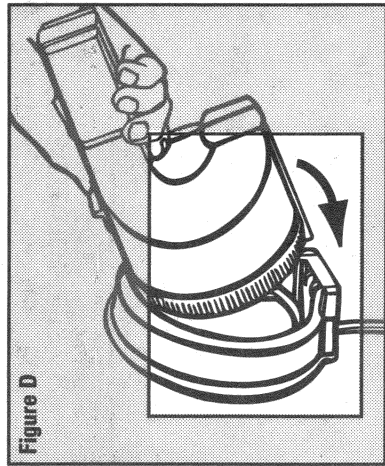


Figure D

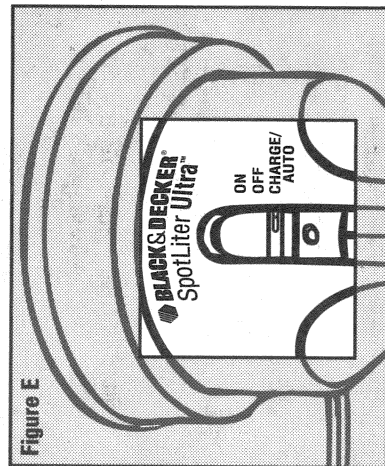


Figure E

To charge the SpotLiter Ultra™ Rechargeable Light, push the On/Off/Charge/Auto Switch to the Charge/Auto position. (Figure E)

NOTE: In the event of a power failure, the Light will automatically turn on, providing the unit is charged, causing the Charging Ring to glow. This makes it easy to locate the Light in the dark. Although the Light will also charge in the Off position and the LED light will glow, the Light will not turn on in the event of a power failure.

Plug the Charger Plug into a standard electrical outlet. Once the Plug is plugged into the outlet, the LED Light will turn on. The Plug is designed to remain plugged in at all times. It is recommended that the Switch be kept in the Charge/Auto position when the Light is in the Charging Ring so the unit will always be ready to use and will automatically light in the event of a power failure.

NOTE: BEFORE FIRST USE, CHARGE THE SPOT-LITER ULTRA™ RECHARGEABLE LIGHT FOR AT LEAST 24 HOURS.

Do not store the Light in locations where the temperature may reach 120° F or more (such as outside sheds or metal buildings in the summer.) Do not charge the batteries when the temperature is below +40° F or above +105° F. Damage to the batteries may occur.

For easiest removal, first unfold the Handle and then pull the Light up and out from the Charging Ring.


Keep the Charger plugged into a standard electrical outlet at all times. When charging, the Charger will become warm to the touch.

To correct shortened operating times, fully discharge the unit by running it until the Bulb becomes dim. Then recharge the unit for 24 hours. This procedure may have to be repeated several times.

OPERATION

Remove the Light from the Charging Ring. Slide the On/Off/Charge/Auto Switch forward to the On position. Be sure to slide the Switch to the Off position when not in use and to the Charge/Auto position when storing the Light in the Charging Ring. When the Light is not in the Charging Ring and the On/Off/Charge/Auto Switch is in the Charge/Auto position, the Light will remain "ON". Although the Light operates with the Switch in the Charge/Auto position, it is brightest in the "ON" position.

Care Guide

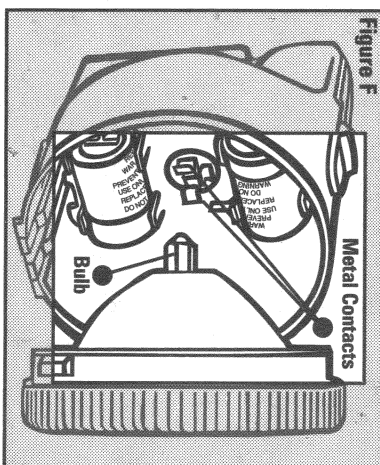

BULB REPLACEMENT
Remove the Lens Head of the unit by twisting counterclockwise like a jar top and pulling straight out. This will expose the Bulb.

NOTE: Two bright metal contacts will be exposed inside the housing. (Figure F) Care should be taken not to bend these when disassembling and reassembling.

Remove the Bulb from the back of the reflector by turning counter-clockwise and pulling straight out. Replacement Bulbs are available at local Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Centers or on the order form located on page 11 of this book. Also KPR102 or K-2 Krypton bulbs or PR2 bulbs may be substituted, and are available at many retail stores. The performance of these substitute bulbs is less than the recommended Xenon bulb, but it may be used satisfactorily.

CLEANING PLASTIC PARTS

Use only mild soap (no abrasives) and a cloth dampened with warm water to clean the plastic parts. Avoid all other types of detergents, cleaners or solvents, which might contain chemicals that could seriously damage the plastic. For best performance, keep the Lens clean using a damp cloth. Do not immerse in water.

BATTERY REMOVAL AND DISPOSAL

This product uses two nickel-cadmium rechargeable and recyclable batteries. Upon the end of the batteries useful life they should be removed from the SpotLiter Ultra™ Rechargeable Light and properly disposed of. (See Disposal, page 8)