

DEWALT® DC628, DC629 15 Gauge Cordless Nailers

▲ Les informations suivantes sont incluses en français dans le mode d'emploi. Pour une carte de couvercle en français, appelez le 1-800-4-DEWALT.

▲ La siguiente información está incluida en español en el manual de instrucciones. Para una tarjeta en español para su tapa, llame al 1-800-4-DEWALT.

IMPORTANT SAFETY INSTRUCTIONS – PLEASE READ

IN ORDER FOR TOOL TO FUNCTION PROPERLY:

- DEWALT cordless nailer DC628 is equipped with a bump/sequential selector switch (Fig. 1).
- DEWALT cordless nailer DC629 is **ONLY** capable of operating in sequential action mode (Fig. 2).
- Never use grease, oil, or solvents. Read the tool instruction manual for information on cleaning, lubrication, and maintenance.




PLEASE NOTE: BEFORE YOU DRIVE A NAIL

1. The lower contact trip will ensure your safety and protect your work.
2. Disengage lock-off switch (Fig. 3). (Push tab up to unlock.)

▲ **WARNING:** For your own safety, read the tool instruction manual before using. Failure to heed these warnings may result in personal injury and serious damage to the nailer. When servicing this tool, use only identical replacement parts.

▲ **WARNING:** Always wear proper eye and hearing protection when operating tool.

▲ **CAUTION:** Disconnect battery pack from tool before making any adjustments, changing accessories, servicing, or moving the tool. Such preventative safety measures reduce the risk of starting the tool accidentally.

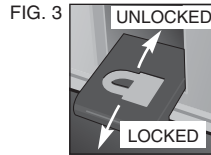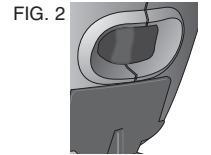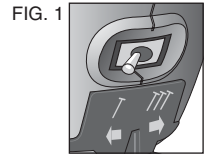

GETTING STARTED

1. Charge batteries.
2. Select fire mode (Fig. 1).
3. Select depth setting (1 = shallow; 6 = deep).
4. Select and insert nails (refer to **What Nails Work in My DEWALT Cordless Nailer?** on this sheet).
5. Insert charged battery.
6. Ensure lock-off switch is disengaged (Fig. 3).



TROUBLESHOOTING

Symptom	Cause	Solution
Lights flash 4 times.	Low or damaged battery.	Charge or replace battery.
Lights flash continuously.	Jammed fasteners.	Remove battery, clear jam, reinsert battery, operate nailer.
Nailer does not fire.	Lock-off switch is engaged.	Disengage.
Standing nails.	Incorrect depth setting.	Adjust depth setting.

Please refer to the instruction manual for additional symptoms.

HOW DO I SERVICE MY DEWALT CORDLESS NAILER?

A step-by-step explanation of user serviceable parts is available in your instruction manual (refer to **REPAIRS: To Service**). You may also call 1-800-4-DEWALT for additional assistance.

WHAT NAILS WORK IN MY DEWALT CORDLESS NAILER?

Cat. #	Description
DCA15125-1	1-1/4" 1000 count 15 GA 34° angled nails
DCA15125	1-1/4" 4000 count 15 GA 34° angled nails
DCA15150-1	1-1/2" 1000 count 15 GA 34° angled nails
DCA15150	1-1/2" 4000 count 15 GA 34° angled nails
DCA15200-1	2" 1000 count 15 GA 34° angled nails
DCA15200	2" 4000 count 15 GA 34° angled nails
DCA15200G	2" 4000 count 15 GA 34° galvanized angled nails
DCA15250-1	2-1/2" 1000 count 15 GA 34° angled nails
DCA15250	2-1/2" 4000 count 15 GA 34° angled nails
DCA15250-1G	2-1/2" 1000 count 15 GA 34° galvanized angled nails
DCA15200G	2-1/2" 4000 count 15 GA 34° galvanized angled nails

NOTE: The DC628 and DC629 will accept all brands of 15 gauge "DA" type angled finish nails.

Please see your local distributor or call 1-800-4-DEWALT for the closest supplier.



DEWALT Industrial Tool Co., 701 East Joppa Road, Baltimore, MD 21286 (MAY06) Form No. 632254-00
DC628, DC629 Copyright © 2006 DEWALT

The following are trademarks for one or more DEWALT power tools: the yellow and black color scheme; the "D" shaped air intake grill; the array of pyramids on the handgrip; the kit box configuration; and the array of lozenge-shaped humps on the surface of the tool.