

HOW TO REMOVE CHUCK ON DCD777 AND DCD778



REMOVE GEARCASE AND CHUCK AS ABOVE



SPINDLE IS OCTAGONAL ON SHAPE



USE AN 11MM LONG 12 POINT SOCKET THEN PLACE IN A VICE – IF ONLY SHORT SOCKET AVAILABLE USE AN EXTENSION BAR AS ABOVE

ONCE IN VICE REMOVE CHUCK SCREW THEN FIX SERVICE TOOL 559662-99 OR LENGTH ON HEX BAR INTO CHUCK AND REMOVE USING SUITABLE SOCKET