
AFTER ASSEMBLING THE CLUTCH CHECK THAT THE TORQUE IS CORRECT


THE CLUTCH SHOULD ACTIVATE BETWEEN 20NM AND 30NM

- •USE THE TOOLING AS SHOWN IN THIS PRESENTATION
- •HOLD THE SPINDLE ASSEMBLY IN A VISE USING SOFT JAWS GRIP ON THE TOOTHED RING
- •SET THE TORQUE WRENCH TO 18NM AND TRY AT THIS SETTING THE CLUTCH SHOULD NOT ACTIVATE (BELOW 20NM THE CLUTCH SHOULD NOT ACTIVATE)
- •INCREASE THE TORQUE UNTIL THE CLUTCH ACTIVATES THIS SHOULD BE BETWEEN 20 30NM

COMPONENTS NEEDED FOR TORQUE TEST ON NQCC UNITS

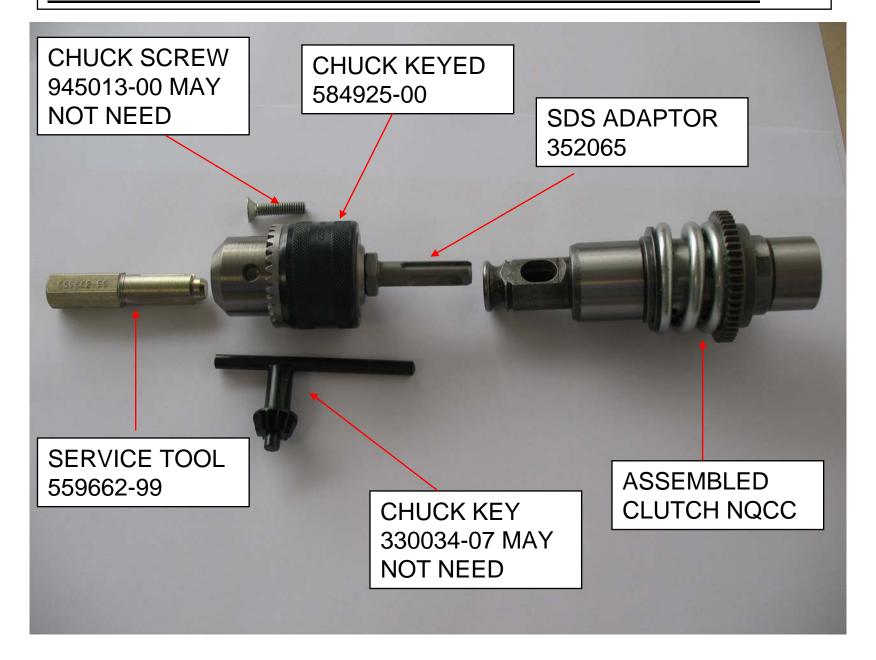

COMPONENTS NEEDED FOR TORQUE TEST ON QCC UNITS

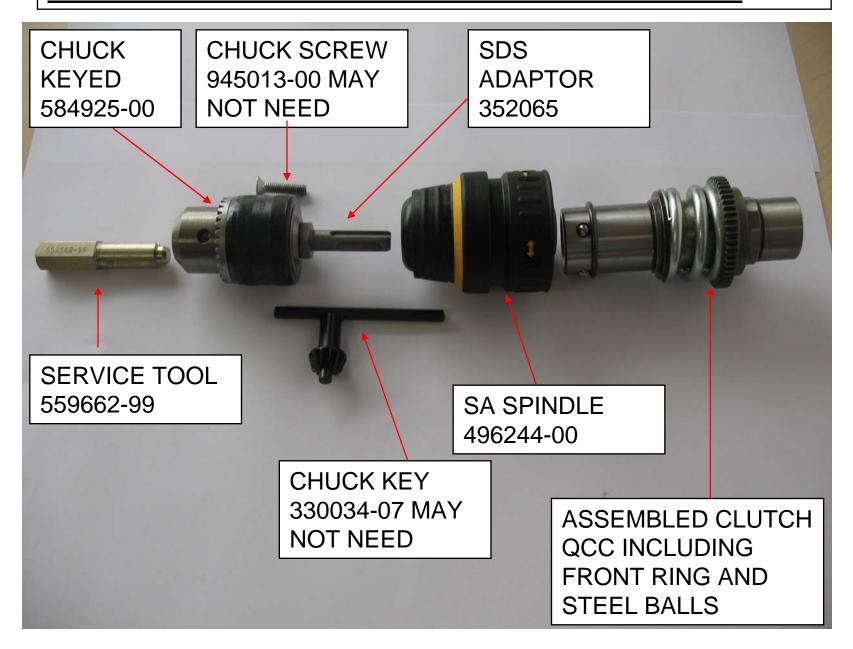

TORQUE WRENCH AND SOCKET




TORQUE WRENCH AND SOCKET



A TORQUE WRENCH CAPABLE OF TESTING UNDER 20NM AND ABOVE 30 NM IS REQUIRED

A TORQUE WRENCH WITH A DRAG INDICATOR SIMILAR TO THIS COULD BE USED

Assemble spindle in jaws using soft jaws

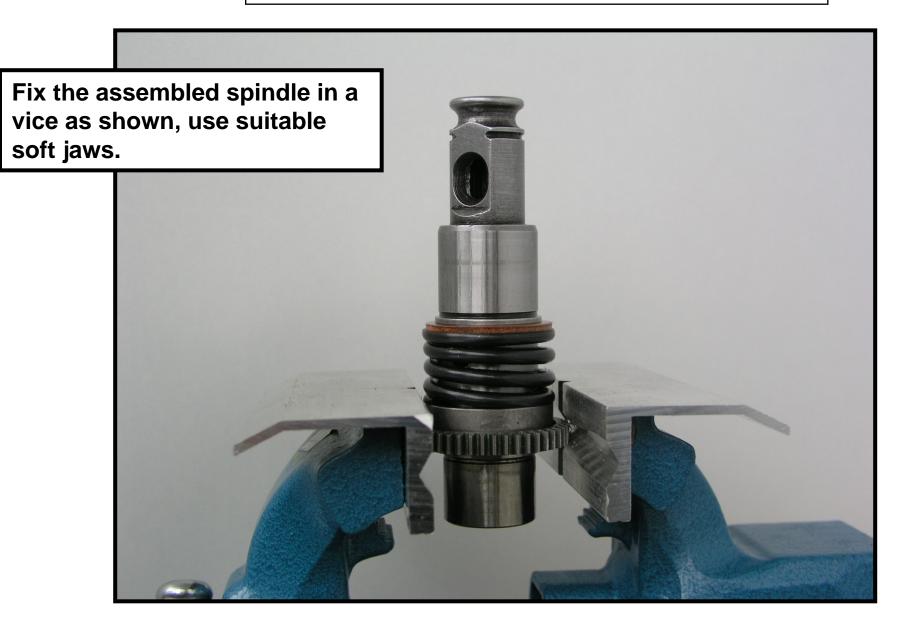

TOOLING IN USE FOR NQCC UNIT

TORQUE WRENCH

SOCKET 14AF

SERVICE TOOL 559662-99

KEYED CHUCK 330034-07

SDS ADAPTOR 352065

ASSEMBLED CLUTCH SA

SOFT JAWS AND VISE



TOOLING IN USE FOR QCC UNIT

