


01

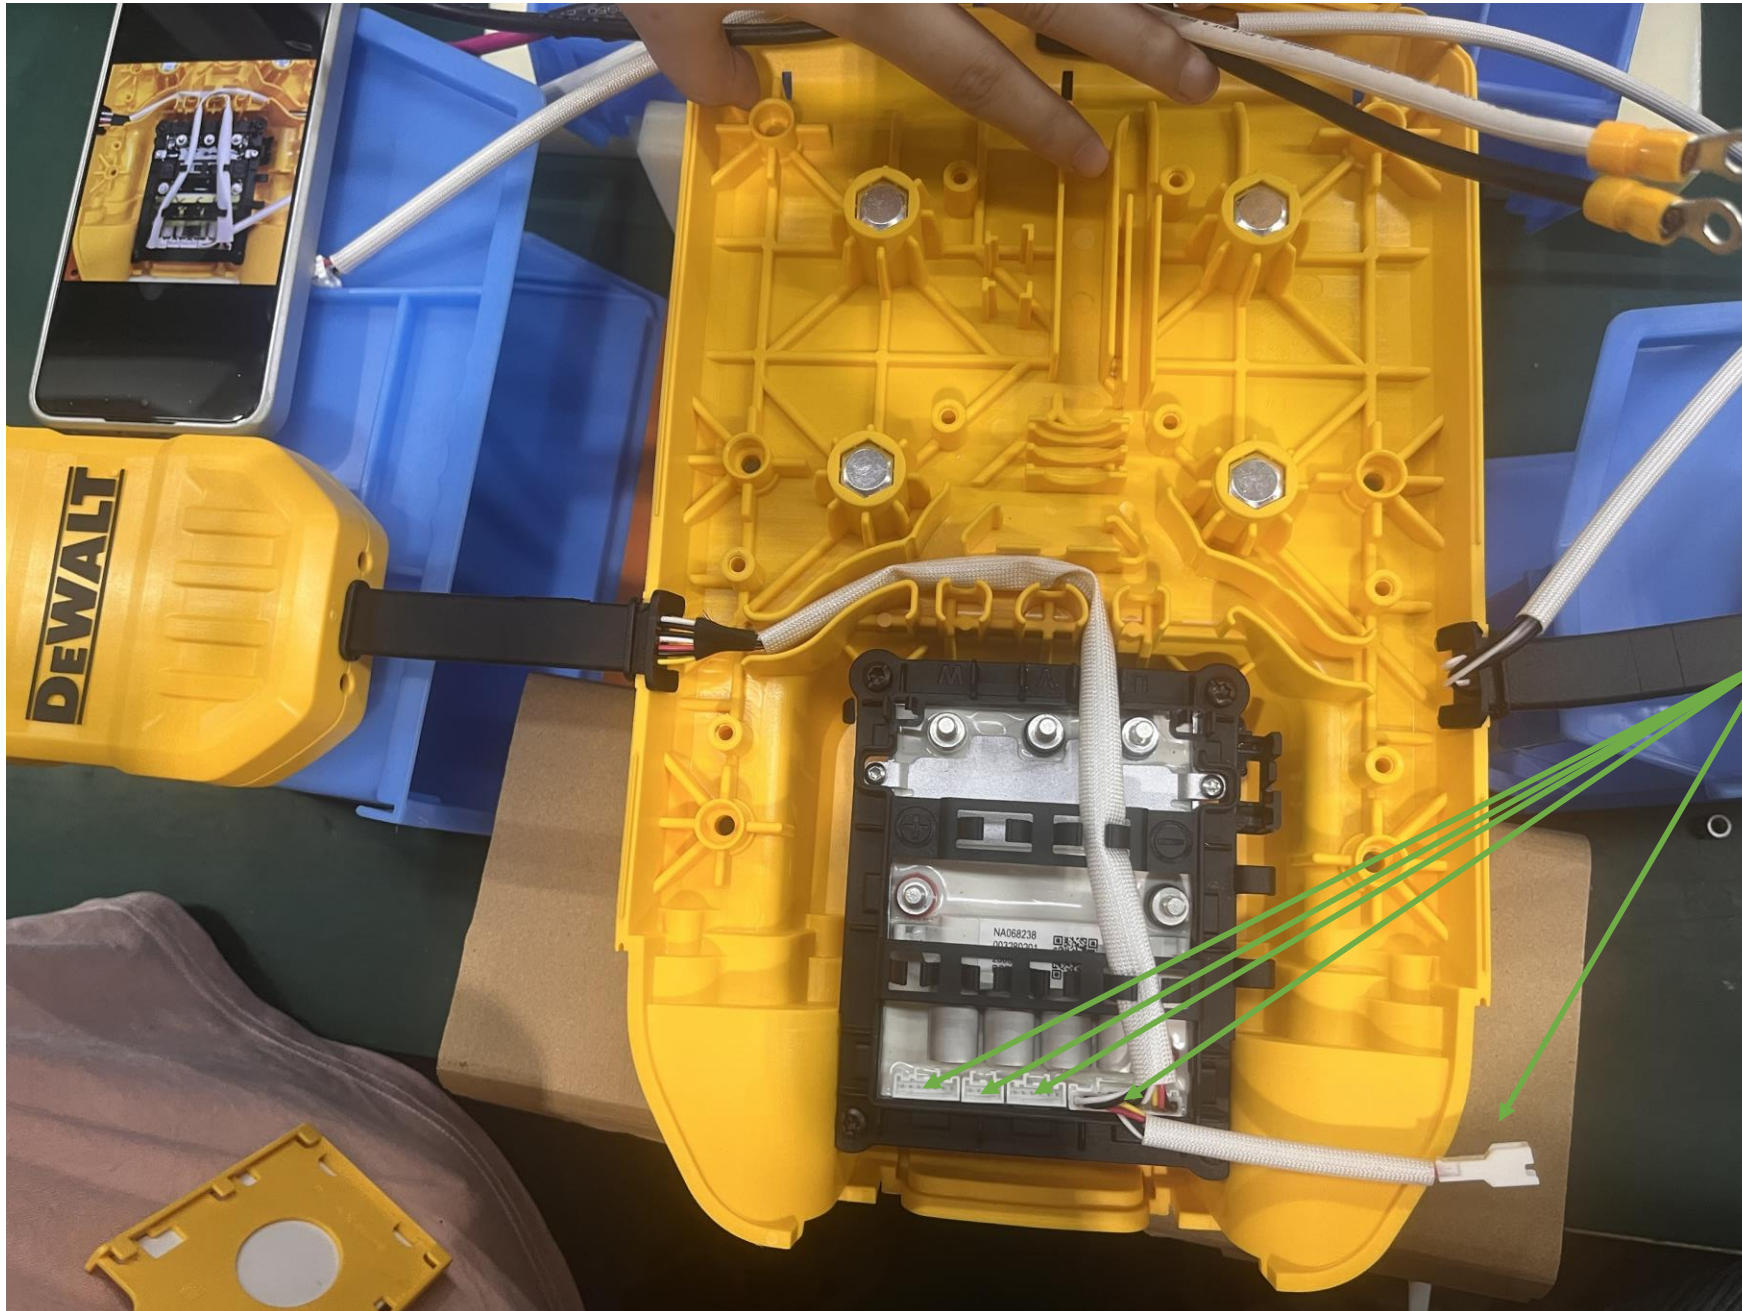


Add Silicone Grease NA218891 to all wire-to-wire headers BEFORE connecting. Fill up header. Also on BLEM module before connecting!






02

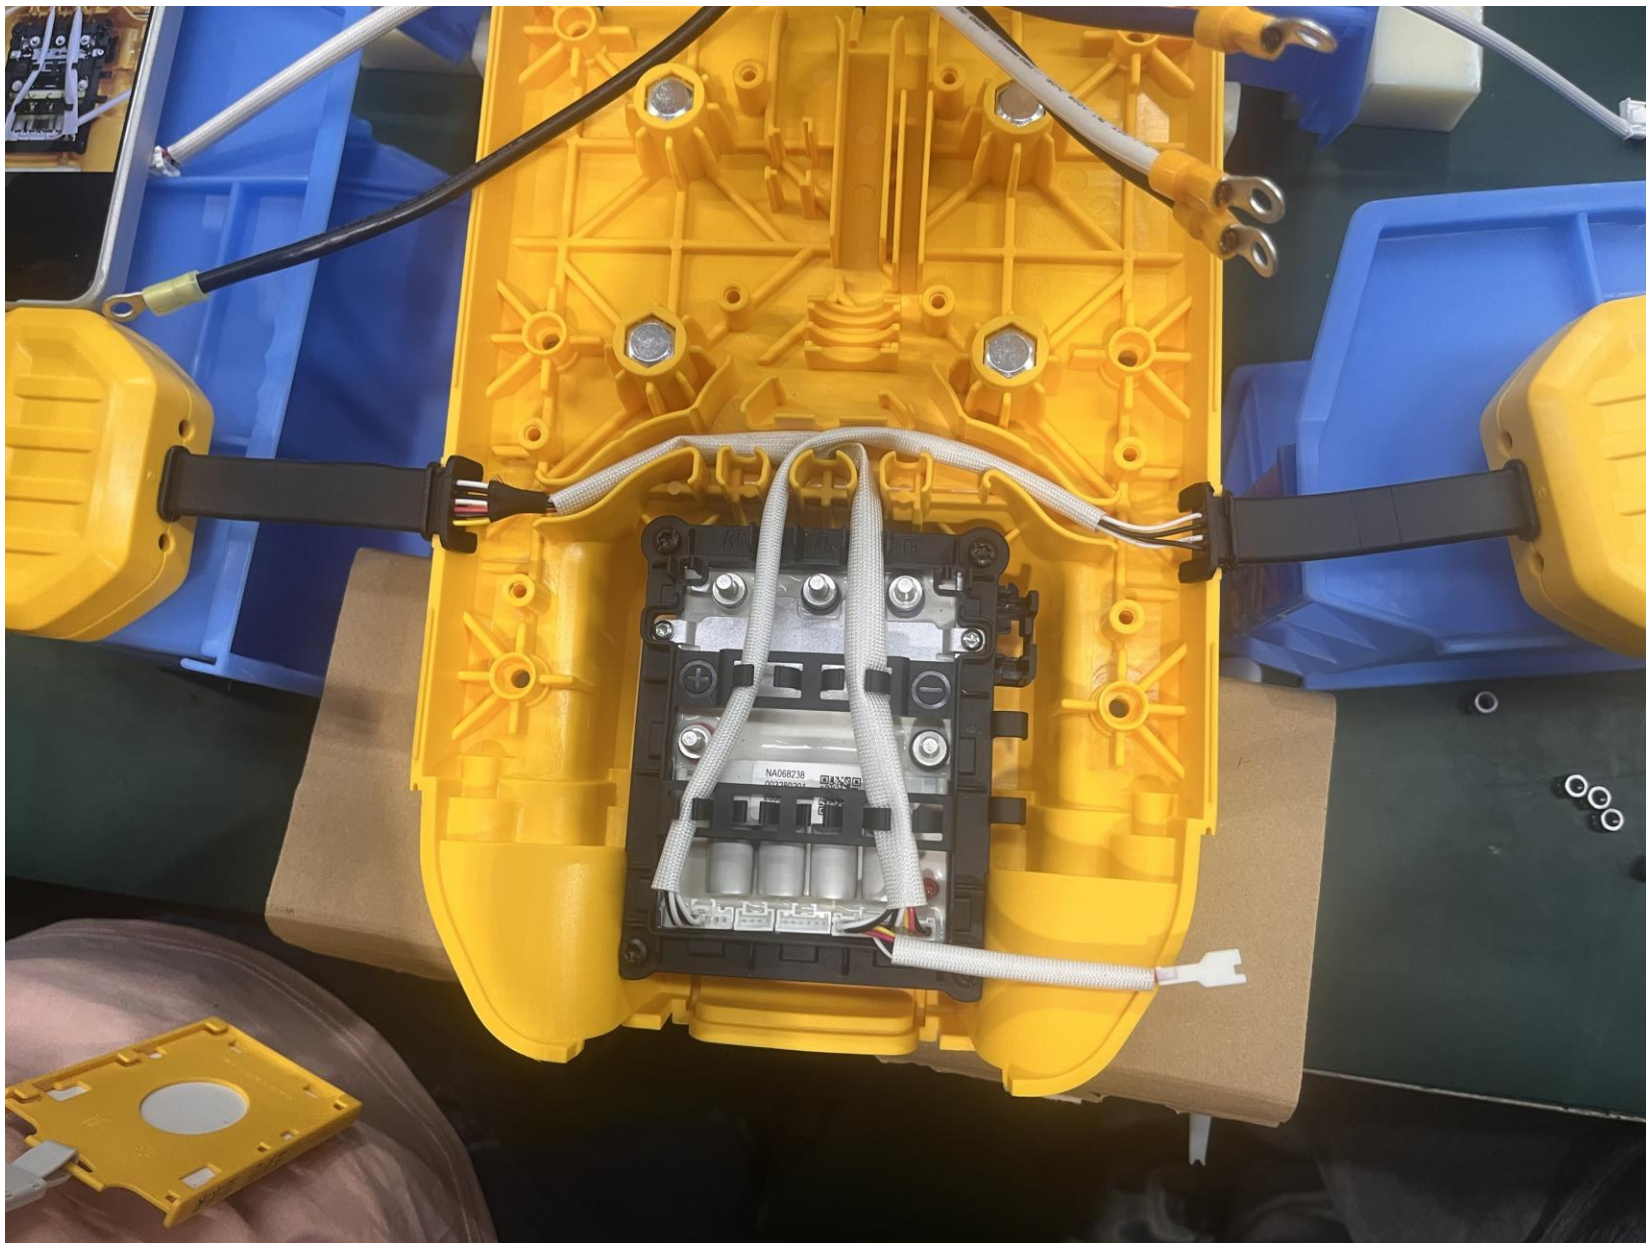


03

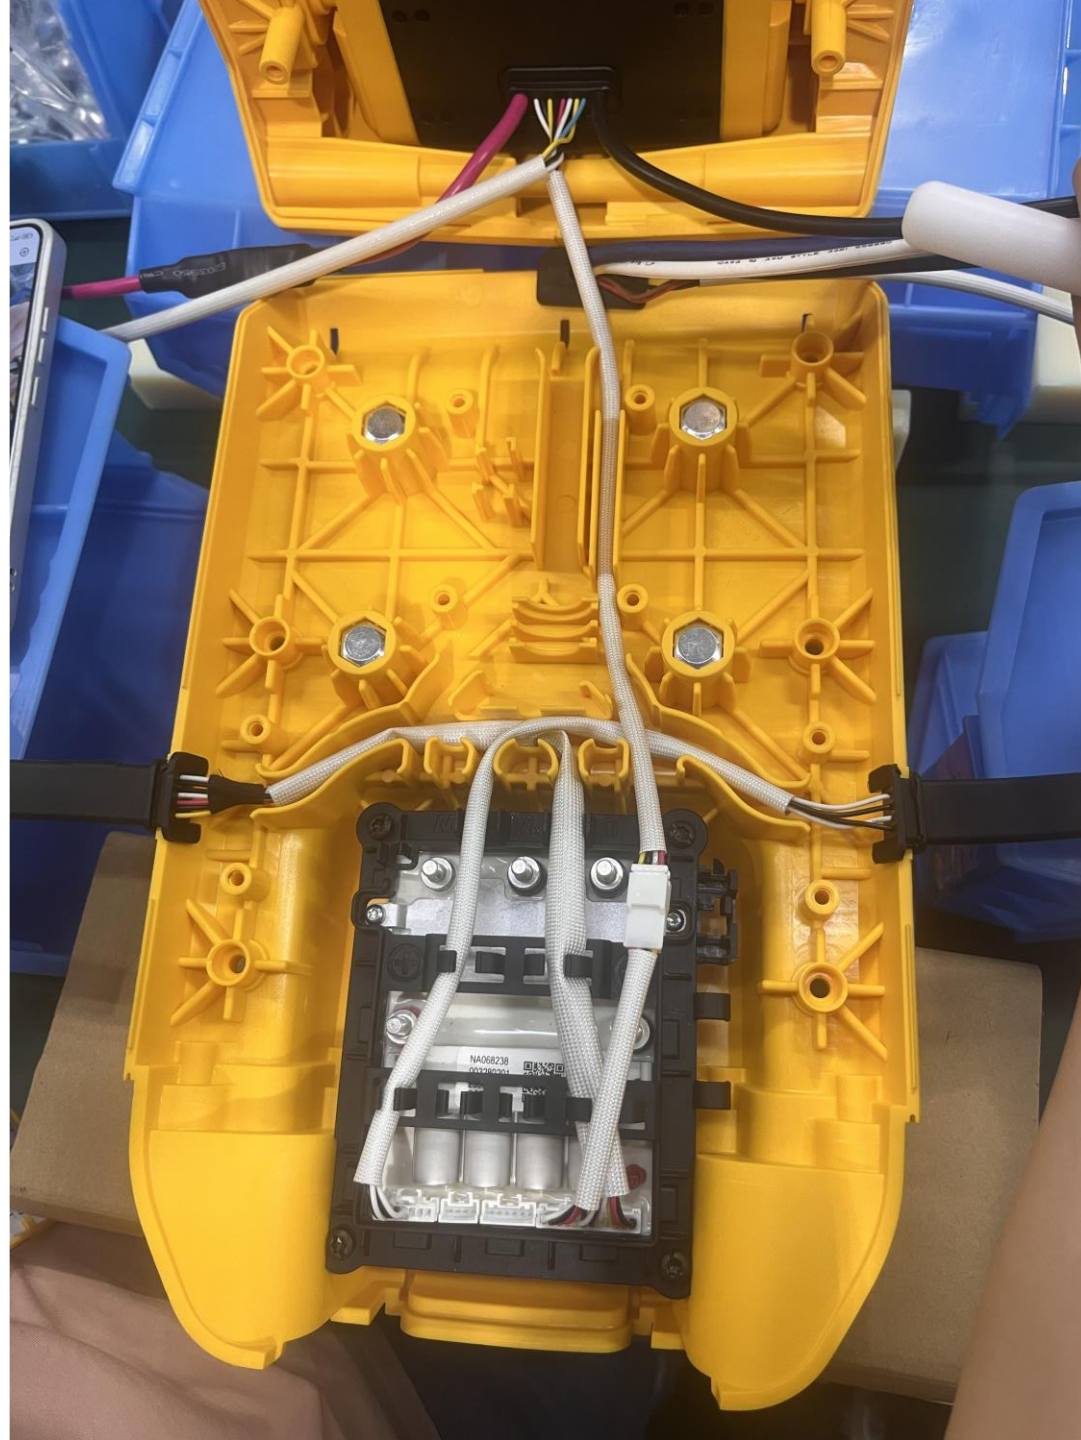




04

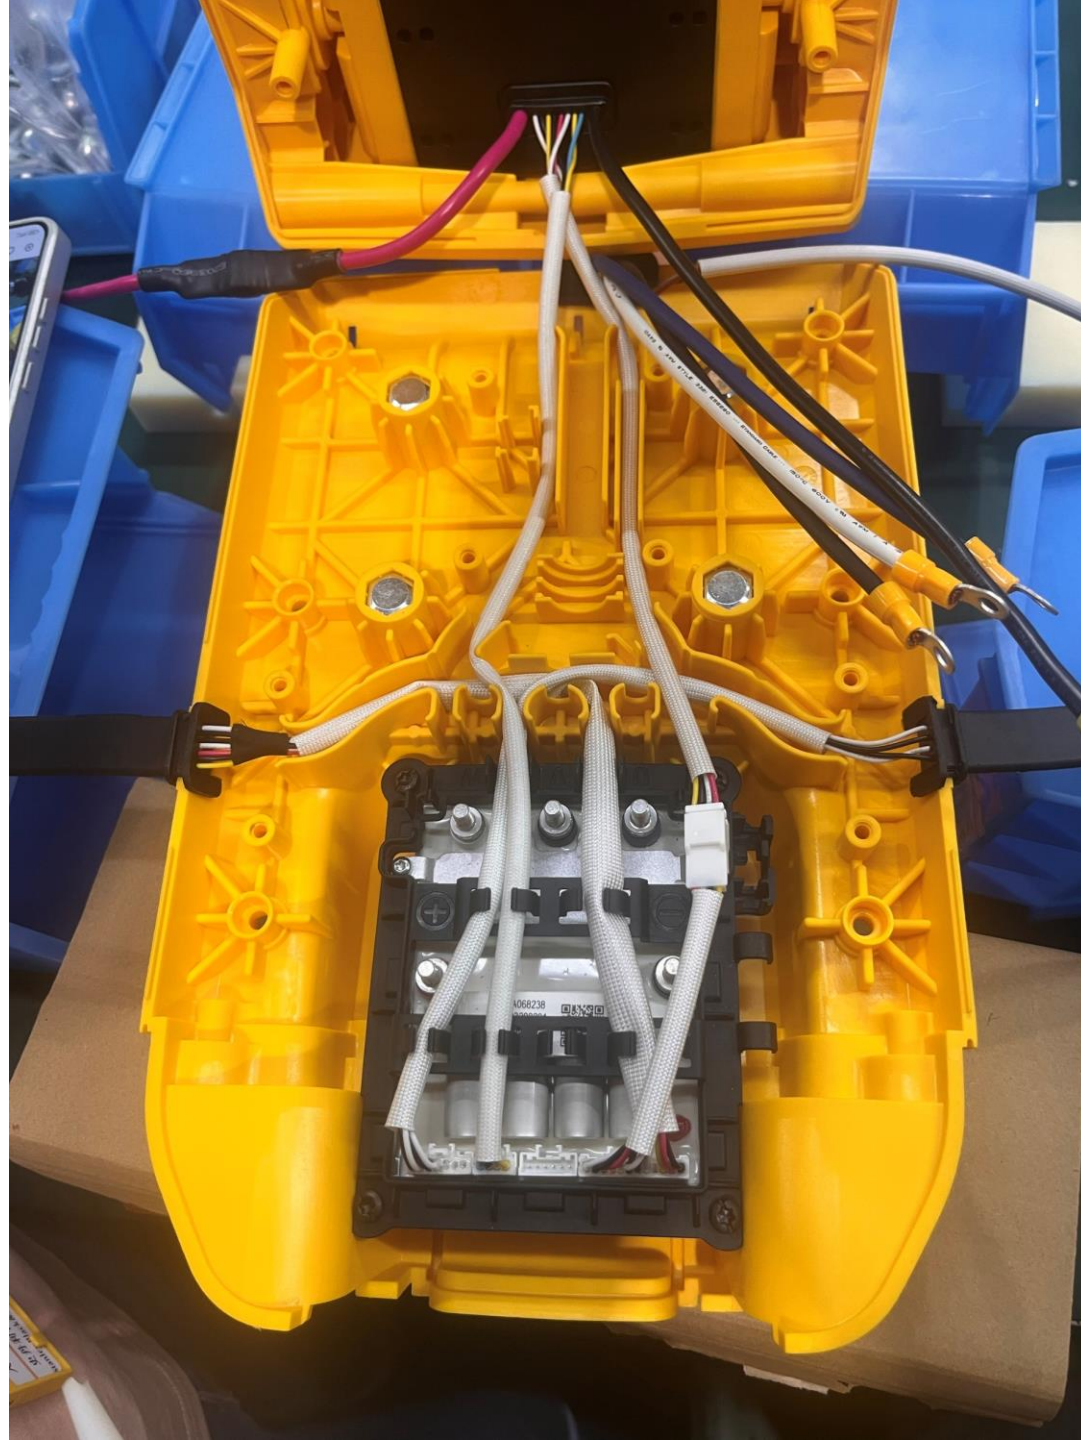

05

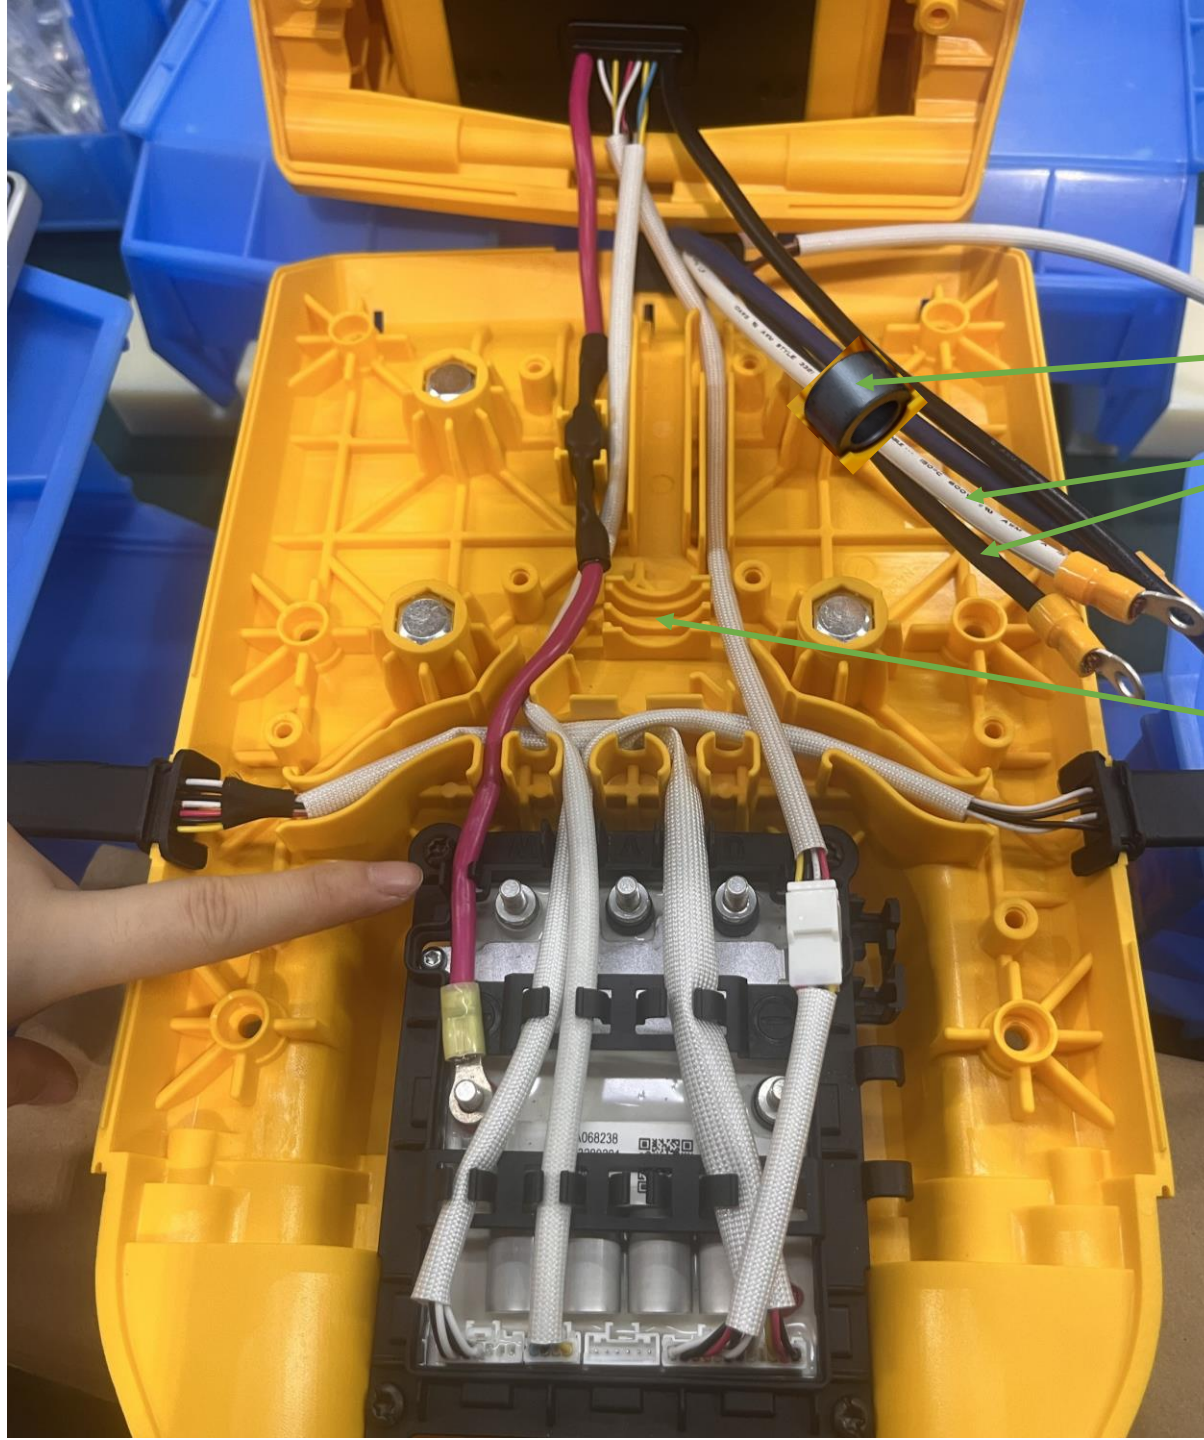


Add Ferrit core around UVW – put each cable separately through the core


Place Ferrite core with cables into this area



06

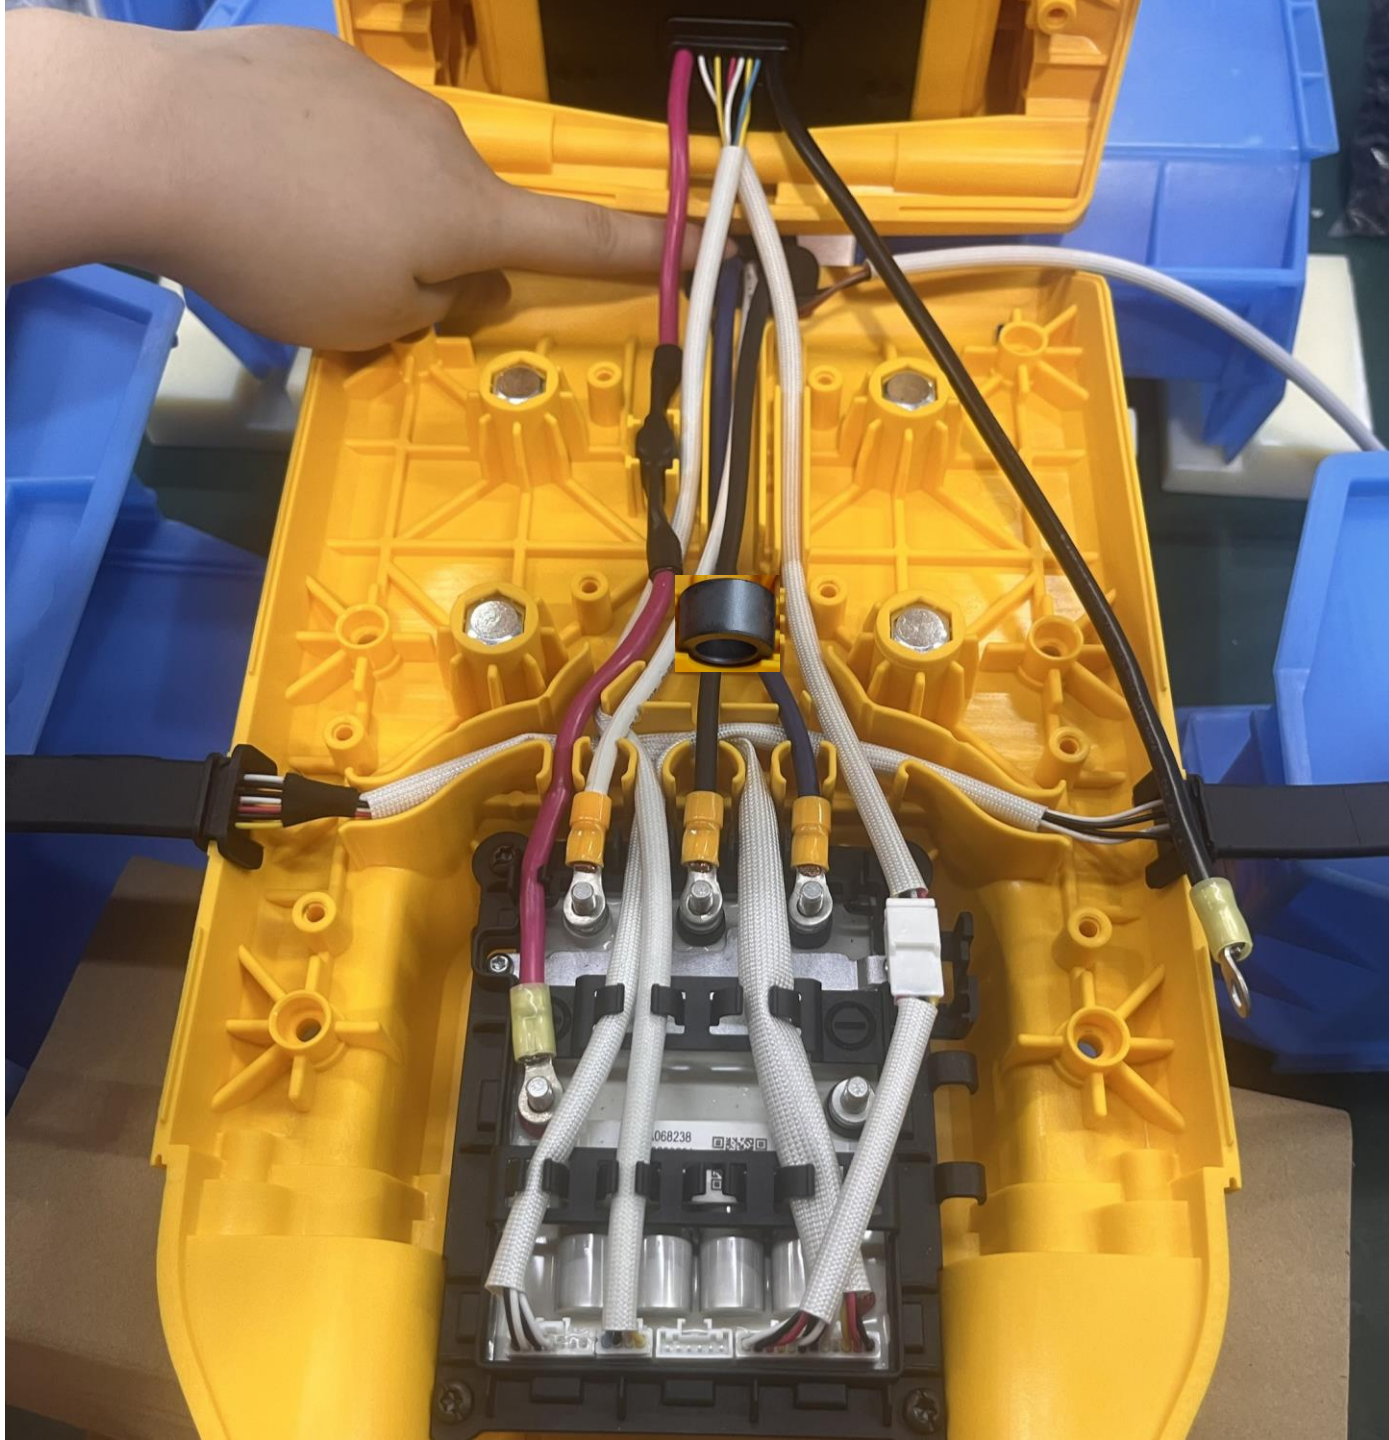

07

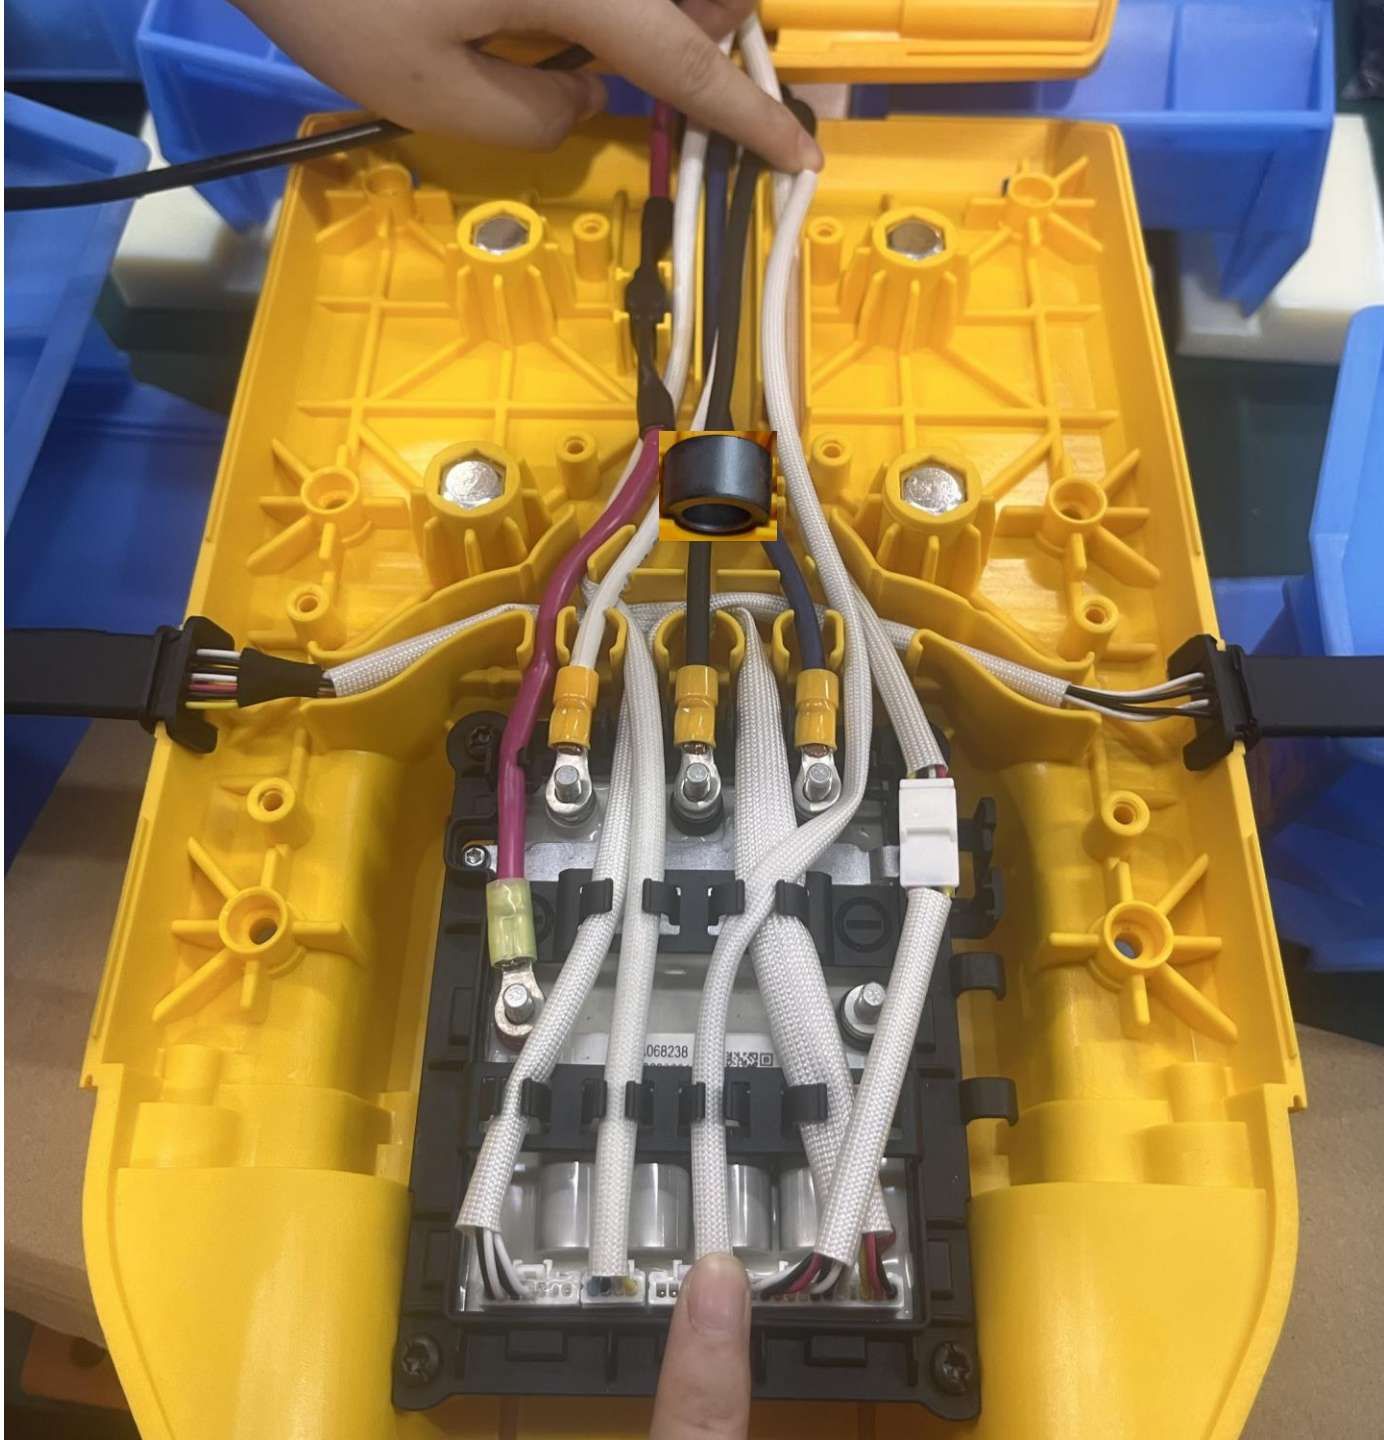



08

