

SERVICE NOTICE**ISSUED BY TECHNICAL SERVICES**

Subject: DCPS660AG2 Oil Change Requirements

Service Notice No. **SN971**Date Code Range: **All**

Page 1 of 1

Other Reference: DCPS660AG2

Issued: 06/09/2025

Service Notice: Oil Change Maintenance Information for DCPS660AG2 PowerShift Rammer
Attention Technicians:

We have identified that the DCPS660AG2 manual is missing critical information regarding oil change requirements. Please follow the updated procedures below to ensure proper inspection and maintenance of affected units.


Affected Model: DCPS660AG2

Procedure: Oil Change Maintenance

Oil Level Inspection (Refer to Fig. Q):

1. Place the rammer in a horizontal position.
 - **IMPORTANT:** Allow the rammer to rest for a few minutes so the oil can settle back into the housing.
2. Clean the oil sight glass (16).

Fig. Q

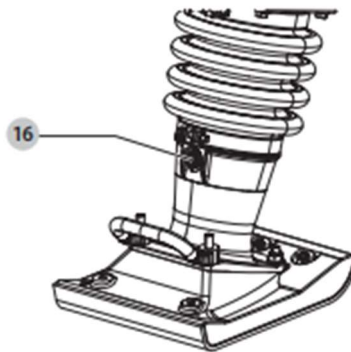

3. Check the oil level.
4. The oil should reach at least the upper edge of the sight glass.
 - If the oil level is low, take the rammer to an authorized DeWALT service center for topping off or replacement.

- Oil should be replaced after every 200 hours of service or once annually, whichever comes first.

Daily Maintenance:

- Before each use, check the oil level. If the oil is low, refill or change the oil as needed (preferably at a service center).

Oil Specifications:

- Use regular vehicle engine oil, 10W40 viscosity.
- Required quantity: 500 ml (16.907 oz).

For detailed repair and maintenance instructions, please refer to the following link:

[DCPS660AG2 PowerShift Rammer Repair and Maintenance Guide](#)

Please ensure all steps are followed meticulously to maintain tool performance and safety.

Thank you for your attention to this matter.