



J175WP

Operation and Maintenance Manual



3/4" J175WP

WARNING



Before operating this tool, all operators should study this manual to understand and follow the safety warnings and instructions. Keep these instructions with the tool for future reference. If you have any questions, contact your **PROTO**® representative or distributor.

Part #30L200158

3/4" Drive Impact Wrench

TABLE OF CONTENTS

Introduction	2
Specifications	3
Safety Instructions	4
Getting Started	5
Tool Components	6
Contact Information	8

INTRODUCTION

The PROTO® J175WP is a precision-built tool, designed for high torque assembly and disassembly of threaded fasteners. This tool will deliver efficient, dependable service when used correctly and with care. As with any fine power tool, for best performance the manufacturer's instructions must be followed. Please study this manual before operating the tool and understand the safety warnings and cautions. The instructions on installation, operation and maintenance should be read carefully, and the manuals kept for reference. NOTE: Additional safety measures may be required because of your particular application of the tool. Contact your PROTO® Distributor with any questions concerning the tool and its use.

PROTO INDUSTRIAL TOOLS®
2195 East View Parkway
Suite 103
Conyers, Georgia 30013
Phone: +1 800-800-TOOL
+1 770-648-9108
Fax: 770-648-9108
www.protoindustrial.com

WARRANTY

We warrant that this tool shall be free from manufacturing defects for a period of TWO YEARS from the original purchase date. Our obligation to the original purchaser shall be limited to repairing or replacing, at our expense (not including shipping charges) a defective tool if returned by the original purchaser within two years from the date of purchase, all incoming shipping charges prepaid. THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGES TO THE TOOL (i) after the warranty period expires; (ii) resulting from misuse or abnormal operation; (iii) resulting from a failure to properly lubricate, maintain or operate the tool; or (iv) resulting from any repair or maintenance services performed by any party other than PROTO® at all DeWALT Service Centers or a person authorized by PROTO® to provide repair and maintenance services for this tool.

SPECIFICATIONS




SPECIFICATIONS

Model #	Square Drive in	Blow Rate bpm	Breakaway Torque ft-lbs / Nm	Noise Level						Vibration Level	
				Pressure dB(A)	Power dB(A)	Pressure dB(C)	Pressure dB(C)	m/s ²	m/s ²		
J175WP	3/4	950	1560 / 2115	97.8	3.0*	108.8	3.0*	< 130	3.0*	4.91	0.79**

Model #	Free Speed rpm	Average Air Consumption cfm / l/min	Working Pressure psi / bar	Weight lbs / kg	Dimensions	
					in	mm
J175WP	5300	7.1 / 200	90 / 6.2	8.4 / 3.8	8.9 x 3.8 x 8.9	227 x 97 x 227

* = measurement uncertainty in dB(A)

** = measurement uncertainty in m/s²

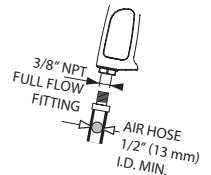

Use Hi-Flow air plugs and couplers for maximum tool performance

! WARNING

IMPORTANT SAFETY INFORMATION ENCLOSED.
READ THIS MANUAL BEFORE OPERATING THE MACHINE.

FAILURE TO OBSERVE THE FOLLOWING WARNINGS COULD RESULT IN INJURY.



Do not use damaged, frayed or deteriorated air hoses and fittings.



Always wear hearing protection when operating this tool.



Air powered tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions may be harmful to your hands and arms. Stop using any tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.



Always turn off the air supply and disconnect the air supply hose before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool.



Do not carry the tool by the hose.



Always wear eye protection when operating or performing maintenance on this tool.



Keep body stance balanced and firm. Do not over-reach when operating this tool.



Operate at 90 psig (6.2 bar / 620 kPa) Maximum air pressure.

SAFE OPERATION


- ▶ Always wear eye protection when operating or performing maintenance on this tool.
- ▶ Always wear hearing protection when operating this tool.
- ▶ Keep hands, loose clothing and long hair away from rotating end of tool.
- ▶ Anticipate and be alert for sudden changes in motion during start up and operation of any power tool.
- ▶ Keep body stance balanced and firm. Do not overreach when operating this tool.
- ▶ Air powered tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions may be harmful to your hands and arms. Stop using any tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.
- ▶ Use impact rated accessories recommended by PROTO®.
- ▶ This tool is not designed for working in explosive atmospheres.
- ▶ This tool is not insulated against electric shock.
- ▶ Always turn off the air supply and disconnect the air supply hose before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool.

PLACING TOOL IN SERVICE

LUBRICATION



Always use an air line lubricator with this tool. After every eight hours of operation, if a lubricator is not used on the compressed air network, inject 1/2 to 1cm³ of approved air tool oil through the machine's inlet connection.

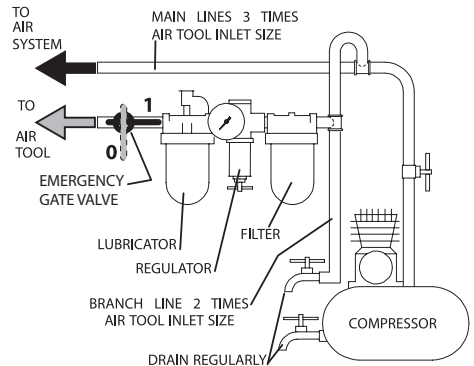

GETTING STARTED

- ▶ Always operate, inspect and maintain this tool in accordance with all regulations (local, state, federal and country) that may apply to hand-held / hand-operated pneumatic tools.
- ▶ For maximum performance, the air coupler on the wall should be the next size larger than the air coupler used on the tool. The coupler closest to the tool should not be smaller than the proper air supply hose size.
- ▶ For safety, top performance, and maximum durability of parts, operate this tool at 90 psig (6.2 bar / 620 kPa) maximum air pressure at the inlet with 3/8" (10mm) inside diameter air supply hose. Adequate air supply volume is required for full power. Restrictions in the supply and volume will cause a drop in air pressure when the trigger is pulled resulting in lower power.
- ▶ Always turn off the air supply and disconnect the air supply hose before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool.
- ▶ Do not use damaged, frayed or deteriorated air hoses and fittings.
- ▶ Be sure all hoses and fittings are the correct size and are tightly secured.
- ▶ Always use clean, dry air at 90 psig maximum air pressure. Dust, corrosive fumes and/or excessive moisture can ruin the motor of an air tool.
- ▶ Inject the tool every 100-200 cycles with 6-8 grams of grease. Applications vary and grease may need to be applied more in colder climates/conditions and less in hotter climates/conditions. The grease that should be used should be Petroleum or Synthetic, NLGI Grade 2, -4/230° F(-20/110° C). The tool has a 1/8" Flush type grease fitting. If lower performance is observed immediately after adding grease, service is needed to remove the build-up within the clutch housing.
- ▶ Do not lubricate tools with flammable or volatile liquids such as kerosene, diesel or jet fuel.
- ▶ Do not remove any labels. Replace any damaged label.
- ▶ The use of a hose whip is recommended. A coupler connected directly to the air inlet increases tool bulk and decreases tool maneuverability.
- ▶ The regulator has 3 power positions represented by dots on the dial. Position 1 is the lowest and 3 is full power. To set the tool power with the regulator, turn the dial until the power setting represented by 1, 2 or 3 dots is under the lever in the forward position as shown in Figure A. To assure maximum power in reverse, place the power setting in power setting 3. The triangle arrows on the handle represent forward and reverse.
- ▶ The Forward / Reverse Lever must be fully engaged in either the forward or reverse position to ensure the tool works with maximum performance. If the Forward / Reverse Lever is positioned in the middle (see example below, bottom left picture) between forward and reverse, the tool will not be as efficient and powerful.
- ▶ Use Hi-Flow air plugs and couplers for maximum tool performance

Forward/Reverse Lever

Forward Position

Power Setting

Reverse Position

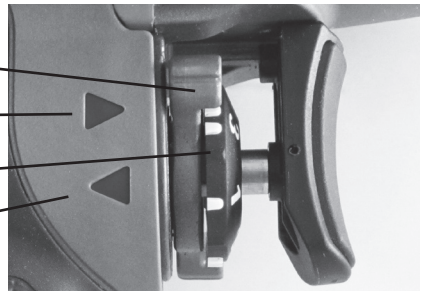


Figure A


Not Engaged - No Power

Power Setting - 1 (Low)

Power Setting 2

Power Setting 3 (Max)



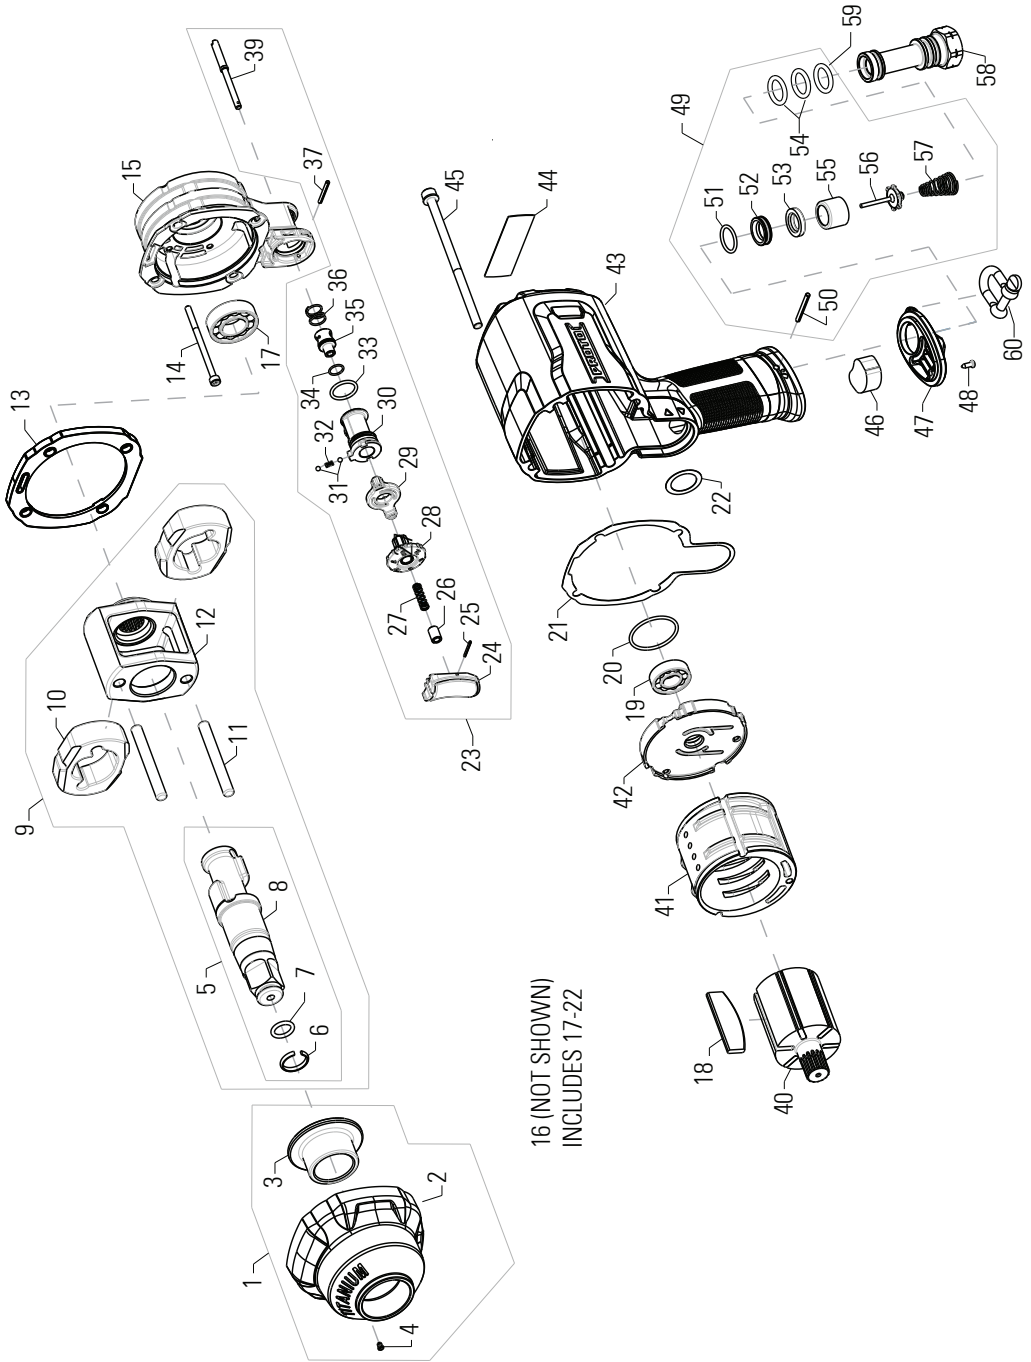

16 (NOT SHOWN)
INCLUDES 17-22

ITEM #	PART #	DESCRIPTION	QTY
	J175WP	3/4" Impact Wrench	
1	30H100055	HAMMER CASE ASSEMBLY	
2	30H200423	HAMMER CASE (CLUTCH HOUSING)	1
3	30R200037	BUSHING	1
4	30R200017	GREASE FITTING	1
5	30D100022-1	ANVIL-ASSEMBLY	
8	30D200024-1	ANVIL-STD (TaperLOK)	1
6	30R200036	RETAINER RING - SOCKET	1
7	30R200035	O-RING	1
9	30D100027-1	IMPACT ASSEMBLY-RETAINER HOLE	
10	30D200026	HAMMER	2
5	30D100022-1	ANVIL-RETAINER HOLE (Taper-LOK)	1
12	30D200025	FRAME (CAGE)- HAMMER	1
11	30D200027	PIN - HAMMER	2
24	30P100008	TRIGGER (BUTTON)	
	30Y200877	TRIGGER-A-PAD	1
	30Y200876	TRIGGER-B-BASE	1
23	30P100010	THROTTLE ASSEMBLY	
24	30P100008	TRIGGER (BUTTON)	1
25	30R200003	ROLL (SPRING) PIN-TRIGGER	1
26	30Y200867	BUSHING-TRIGGER	1
27	30R200040	SPRING-TRIGGER	1
28	30P100011	REGULATOR KNOB	1
29	30Y200831	LEVER-REVERSE	1
30	30Y200869	REVERSE VALVE	1
31	30R200041	BALL-DETENT	2
32	30R200042	SPRING-DETENT	1
33	30R200043	O-RING-VALVE-F/R	1
34	30R200044	O-RING-REGULATOR	1
35	30Y200871	REGULATOR-VALVE	1
36	30R200045	SPRING-REGULATOR	1
37	30R200046	ROLL (SPRING) PIN	1
39	30Y200872	TRIGGER PIN	1

ITEM #	PART #	DESCRIPTION	QTY
43	30H100049	HOUSING w/Grip ASSEMBLY-PROTO	
	30H200417	HOUSING-MOTOR/HANDLE- PROTO	1
	30H200418-01	HANDLE GRIP A - TOP	1
	30H200418-02	HANDLE GRIP B - BASE	1
44	30L200093	LABEL-REAR SPEC 3/4"	1
16	30M100111	MOTOR TUNE UP KIT	
18	30M200012	BLADE-MOTOR	6
17	30R200054	BEARING-FRONT MOTOR	1
19	30R200010	BEARING-REAR MOTOR	1
21	30G200108	GASKET (PACKING) -FRONT BEARING PLATE	1
22	30G200115	GASKET (PACKING) -THROTTLE	1
20	30R200056	O-RING	1
49	30P100021-01	INLET PARTS KIT	
51	30R200048	O-RING - TIP VALVE	1
50	30R200049	ROLL (SPRING) PIN	1
52	30Y200381	INSERT BUSHING - TIP VALVE	1
53	30Y200382	SEAL-TIP VALVE	1
55	30Y200383	BUSHING-TIP VALVE	1
56	30Y200384	TIP VALVE	1
57	30R200050	SPRING - TIP VALVE	1
54	30R200051	O-RING- AIR INLET	2
59	30R200321	O-RING	1
13	30H200426	GASKET (PACKING) -HAMMER CASE	1
15	30M100013	FRONT BEARING PLATE- MOTOR	1
42	30M200019	REAR BEARING PLATE- MOTOR	1
40	30M200010	ROTOR -MOTOR	1
41	30M200015	CYLINDER- MOTOR	1
45	30R200052	HEX.SOC.HD.BOLT	4
14	30R200053	HEX.SOC.HD.BOLT	3
46	30Y200380	MUFFLER	1
47	30H200420	EXHAUST DEFLECTOR	1
48	30R200008	SCREW- SELF TAP	1
58	30Y200362-01	AIR INLET	1
60	30R200312	SHACKLE	1

J175WP

Operation and Maintenance Manual

TETHERING THE TOOL



Use **ONLY** the following load rated Connector for tool suspension: Steel Wire, Stainless 316, Max. Load Capacity 800 lb., Eye Inside Dia. 1/2 in., Overall Length 1 15/16 in., Opening 1/4 in., Stock Thickness 3/16 in. Type : Load Rated



Do **NOT** use the following type or any other type: serious injury could occur.



Check threaded stud periodically.

Thread-locker recommended.

If tool is dropped, replace all tether parts.

CUSTOMER SERVICE

We at PROTO® are committed to our customers, please reference the following phone number for a direct contact to one of our customer technicians. They will be more than happy to help with any service or warranty questions you may have about your power tool.

PROTO INDUSTRIAL TOOLS®
2195 East View Parkway
Suite 103
Conyers, Georgia 30013
Phone: +1 800-800-TOOL
Fax: +1 770-648-9108
www.protoindustrial.com

CE DECLARATION OF CONFORMITY

WE, PROTO INDUSTRIAL TOOLS®, 2195 EAST VIEW PARKWAY, SUITE 103, CONYERS, GEORGIA 30013, DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE PRODUCT **J175WP - PROTO 3/4" AIR IMPACT WRENCH**

- CONFORMS WITH THE DIRECTIVE AND STANDARDS «MACHINERY» DIRECTIVE 2006/42/CE

- AND IS IN CONFORMITY WITH THE PROVISIONS OF THE HARMONISED EUROPEAN STANDARD

EN ISO 12100:10

EN ISO 11148-6:10

EN ISO 15744:08

EN ISO 15744:2008

EN ISO 28927-2:09



Eric Min
QUALITY MANAGER
04.11.2013